

牆壁固定指南

Wall anchoring guide



(圖1 Figure1)

木板牆

 
Wooden walls

固定裝置

使用螺絲直接插入牆架柱，例如宜家家居FIXA螺絲及膠塞套裝(圖1)的5毫米螺絲。

Anchoring device

Screw inserted directly into stud. For example, a 5mm wood screw provided with IKEA FIXA plug and screw set (Figure 1).

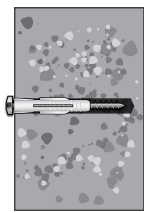

(圖2 Figure2)

混凝土牆及磚牆

 
Concrete or brick walls

固定裝置

實心牆：使用膠塞及螺絲，例如宜家家居FIXA螺絲及膠塞套裝(圖2)的8毫米膠塞。

Anchoring device

Solid Wall: Plug with screw. For example, an 8mm plug provided with IKEA FIXA plug and screw set (Figure 2).



石膏板牆

Plaster wall

固定裝置

膠塞配合螺絲使用。

Anchoring device

Plug with screw.

© Inter IKEA Systems B.V. 2019



不同物料的牆壁需配合不同種類的上牆配件。上牆時，請先因應家居的牆壁物料選用合適的上牆配件(另外購買)。如有疑問，請向專業人員查詢。

Different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home (sold separately). For advice on suitable fixing systems, contact your local specialized dealer.

讓家居更安全

Safer homes together

固定傢具！

避免傢具翻倒發生意外！

Secure it!

Preventing furniture tip-over accidents.



讓家居更安全

Safer homes together

家，應該是最安全的地方，但潛在的家居意外卻可能威脅孩子的安全。只要大家攜手合作，便能避免意外發生，在家多一份安心。

We all want our homes to be a safe place. But in our homes, accidents can put children at risk. Working together, we can help prevent these accidents and make the home a safer place.

- 1 固定傢具！使用內附固定配件固定傢具，並按照牆壁類型選擇合適的上牆工具。如選用宜家家居組裝服務，所有符合「固定傢俱」要求的傢俱必須固定在牆上。有關選擇上牆工具的注意事項，請參考隨附的指南。

Secure it! Use the tip-over restraint provided with the product and the right hardware for your wall type. If you use the IKEA Assembly Service, any furniture with Secure it! requirements must be fixed to the wall. Consult the enclosed guide for help with hardware.

- 2 切勿在抽屜櫃或不宜放置電視的傢具上方擺放電視或重物。

Never put a TV or other heavy objects on top of a chest of drawers or any furniture not intended for use with a TV.

- 3 重物應放在下層抽屜。

Place heavy objects in the lowest drawers.

- 4 切勿讓孩子攀爬抽屜、櫃門或層架。

Never let children climb or hang on drawers, doors or shelves.

如果您有更進一步的問題，歡迎致電客戶服務熱線3125 0888(10:30am-8:00pm)或透過電郵enquiry@IKEA.com.hk與我們聯繫。

If the FAQs cannot answer your question, please feel free to contact our Customer Support Centre Hotline at 3125 0888 (10:30am-8:00pm) or email us at enquiry@IKEA.com.hk.

有關預防傢具翻倒的其他資料或觀看相關短片，請瀏覽[IKEA.com.hk](https://www.IKEA.com.hk)

For more information or to view a tip-over prevention video, visit [IKEA.com.hk/en](https://www.IKEA.com.hk/en)

