


# 量度您的窗簾尺寸

## Measure your window

清楚知道您的窗口尺寸對於設置窗簾是很重要的事，以下所示的五個尺寸將協助您輕鬆設置窗簾。

Knowing the right measurements for your window is important when creating window solutions. The following five measurements will make it easier for you to create the solution that you need.

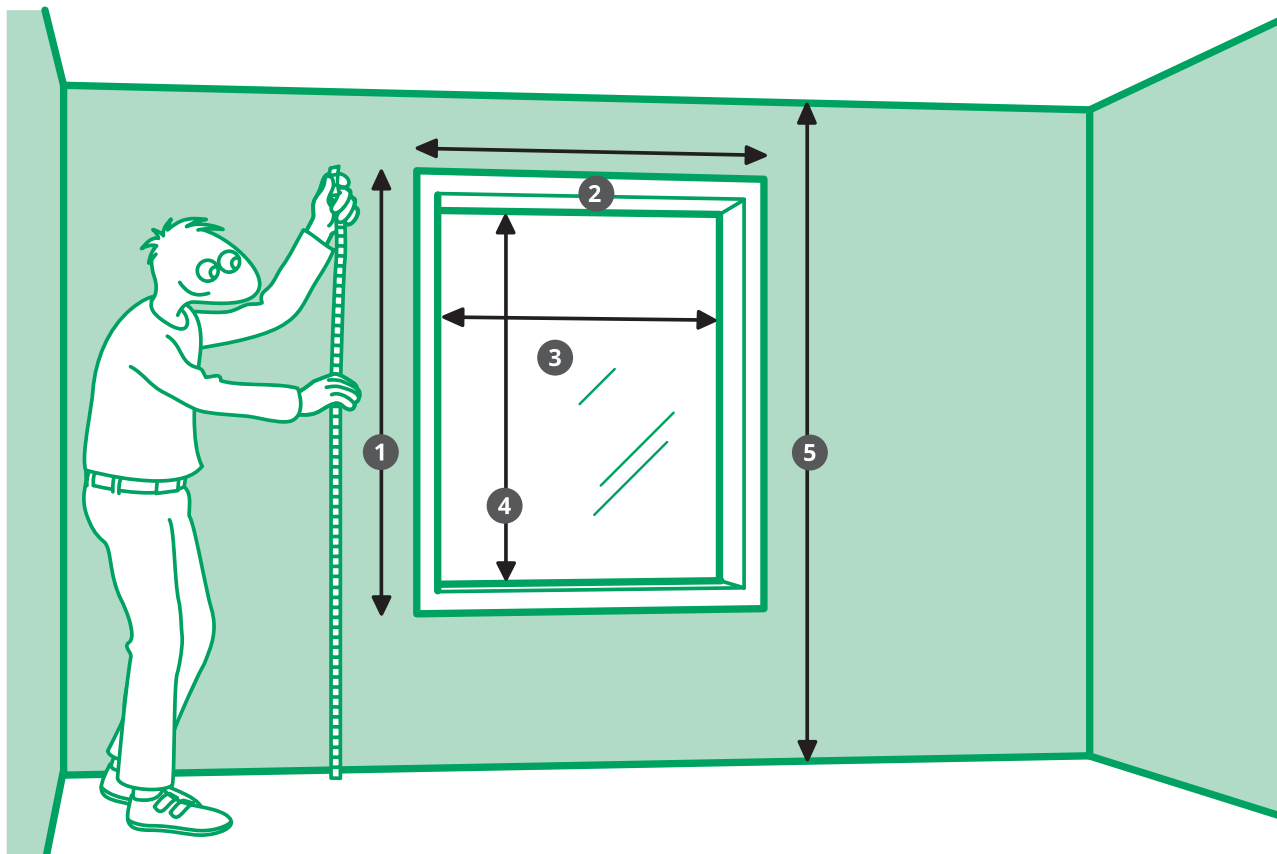

- 1. 量度高度** - 量度窗框高度，上方再加10cm 預留位置安裝窗簾桿、窗簾軌或百葉簾等。
- 2. 量度闊度** - 量度窗框闊度，兩邊額外預留 10cm 位置，作為安裝窗簾桿或窗簾軌的闊度。如果想將窗簾拉得更開，便需預留更多空間。
- 3. 量度內框闊度** - 如果打算安裝百葉簾、捲簾等遮光簾於深的窗框內，便需要量度此闊度，以確保遮光簾能完全遮蓋窗口。
- 4. 量度內框高度** - 這是遮光簾所需的長度。
- 5. 量度牆壁高度** - 如果打算設置由天花至地面的全高窗簾，需要量度此高度，並減去5-10cm 作為安裝窗簾桿或窗簾軌的空間。

- 1. Measure the height** of your window frame. Add 10cm on the top to get the right position of your curtain rod, rail or blind.
- 2. Measure the width** of your window. Add at least 10cm on each side to get the right width of your curtain rod or rail. To pull your curtains or panel curtains back further, add more.
- 3. Measure the inner width** of your window frame when mounting blinds inside the frame. This is to make sure the blinds cover the complete window.
- 4. Measure the inner height** of your window frame to know what length you'll need on your blinds.
- 5. Measure the height of the wall** if you want a floor-to-ceiling window treatment. Subtract 5-10cm from the actual height to give space for the curtain rod or rail.